

Quick Start Manual

Bevel Mite® EBI-C 3.0



www.beveltools.com



Quick Start Manual



BevelMite EBI-C 3.0

1 • Mounting the bevel head

1



2

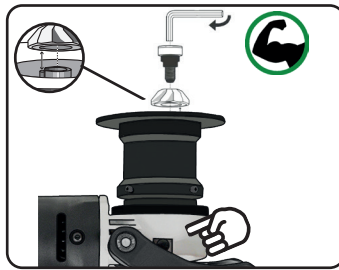
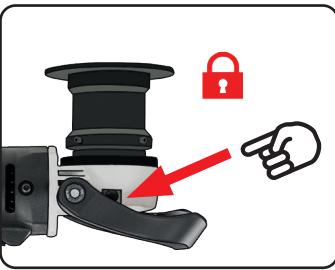


2A • Adjusting the depth (bevel)

1

ON OFF

2

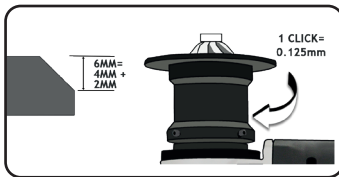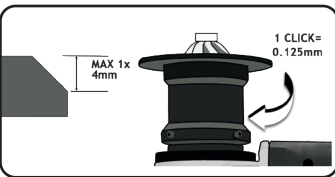



3

2B • Adjusting the depth (radius)

1




ON OFF

2





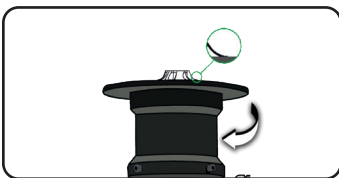
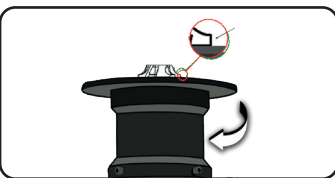


3 • Usage

1 **ON** **OFF**

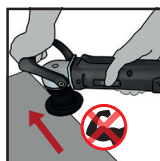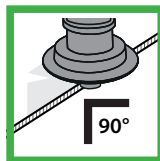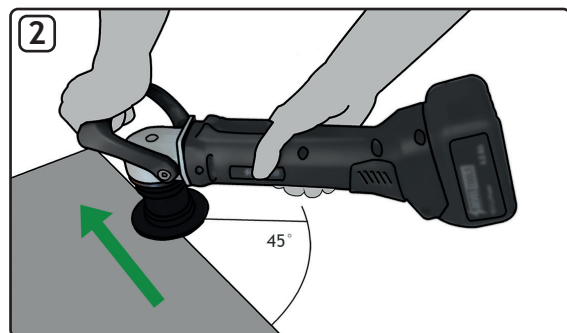

4 • Bevel direction

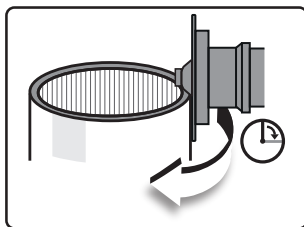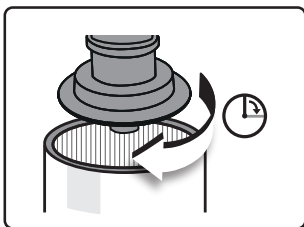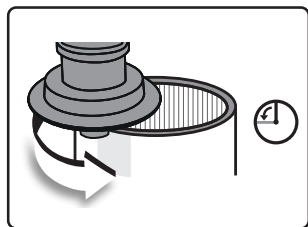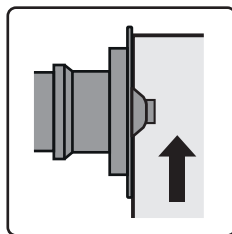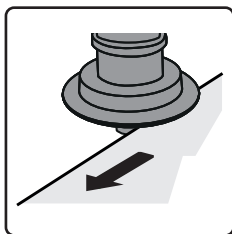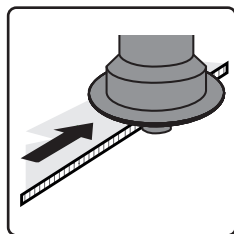



5 • Maintenance

1 **ON** **OFF**

⌚ 50%

2 **ON** **OFF**

⌚ 50%

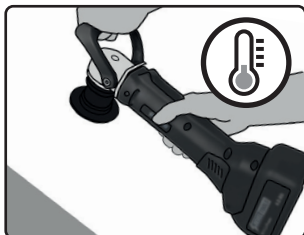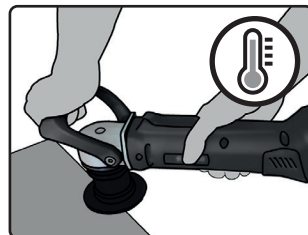

Bevel Mite®

Bevel heads / Freeskoppen / Fräsköpfen / Cabezales de corte



Available in / Verkrijgbaar in / Erhältlich in / Disponible en



Steel
Staal
Stahl
Acero



Premium
Premium
Premium
Premium



Aluminum
Aluminium
Aluminium
Aluminio



YouTube

www.youtube.com/beveltools

Beveltools B.V.
P.O. Box 190
6880 AD
Velp (Gld)
The Netherlands

T +31 (0)26 369 92 22
F +31 (0)26 369 92 23
E info@beveltools.com

Beveltools Inc.
11426 Moog Drive
Maryland Heights
MO 63146
United States

T +1 855 882 3835
F +1 314 567 0124
E sales@beveltools.com